Diagram 1

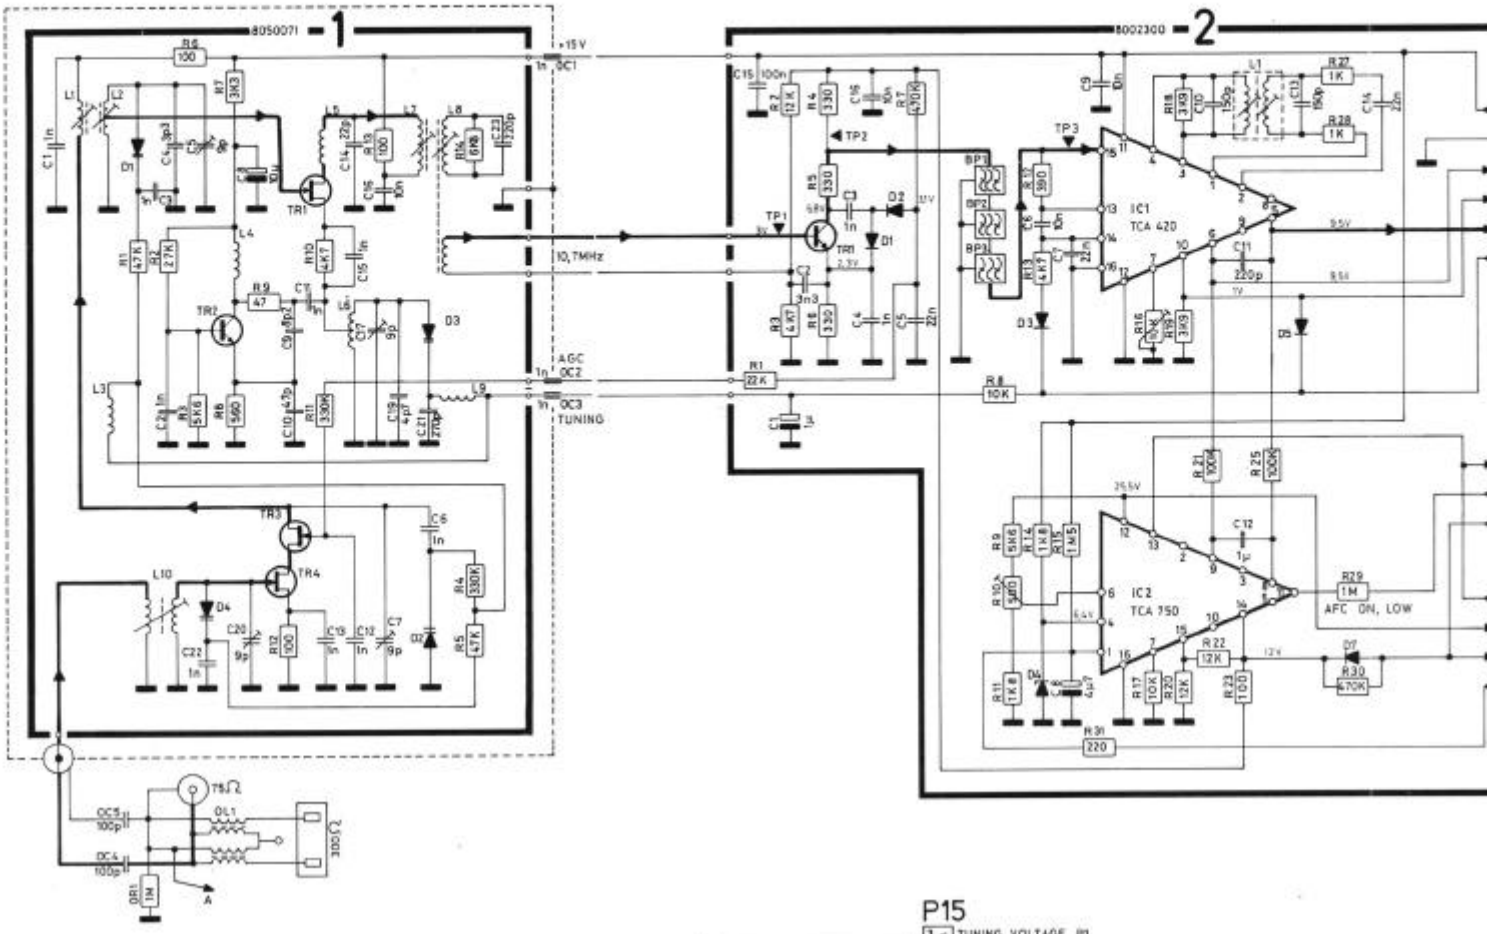
8050071 -1
8002300 -2
+15 V
10,7MHz
AGC
TUNING
IC1
TCA 420
IC2
TCA 750
AFC ON, LOW
75Ω
300Ω

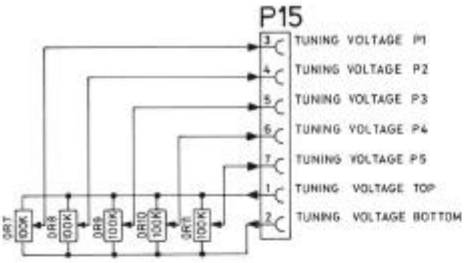
P15
TUNING VOLTAGE P1
TUNING VOLTAGE P2
TUNING VOLTAGE P3
TUNING VOLTAGE P4
TUNING VOLTAGE P5
TUNING VOLTAGE TOP
TUNING VOLTAGE BOTTOM

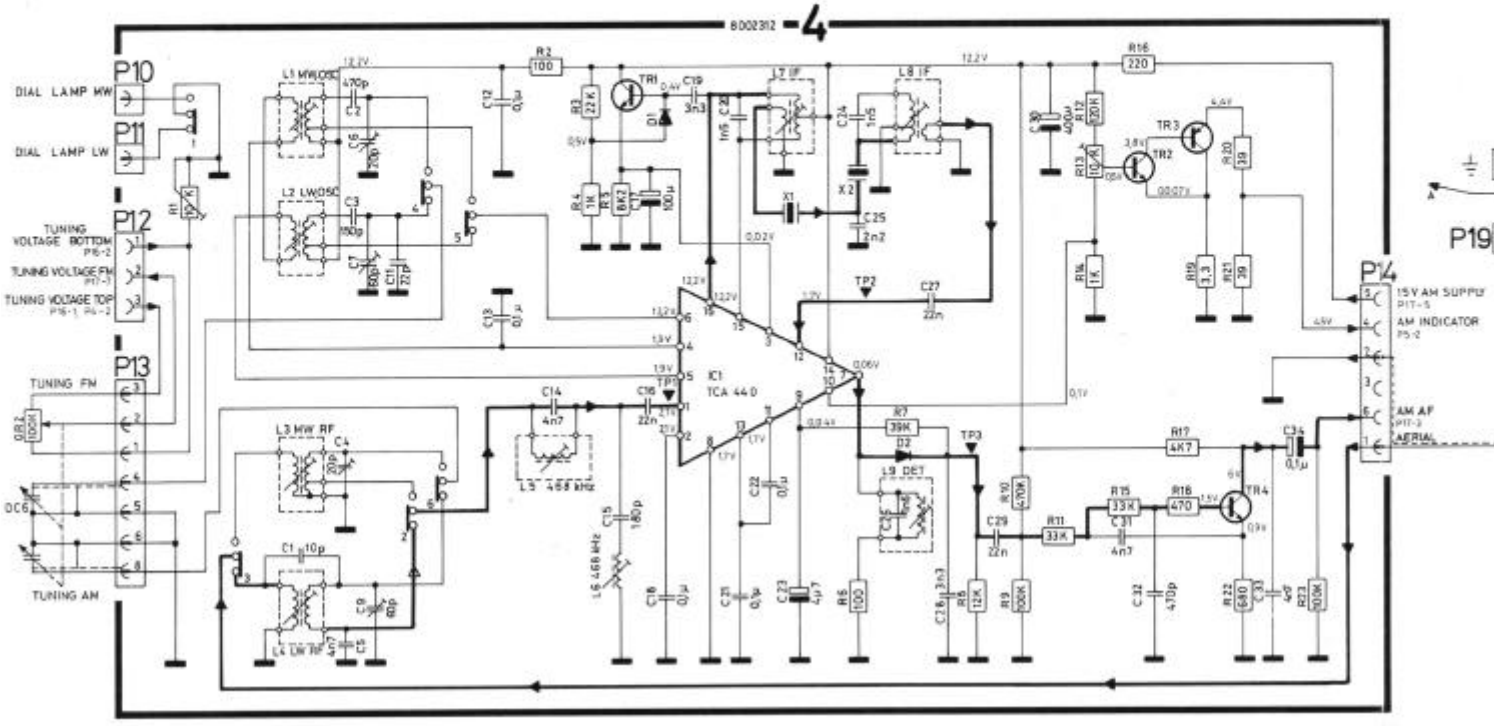
8002312 -4
P10
DIAL LAMP MW
P11
DIAL LAMP LW
P12
TUNING VOLTAGE BOTTOM
TUNING VOLTAGE FM
TUNING VOLTAGE TOP
P13
TUNING FM
TUNING AM
P14
15V AM SUPPLY
AM INDICATOR
AM AF
AERIAL
P19
IC1
TCA 440

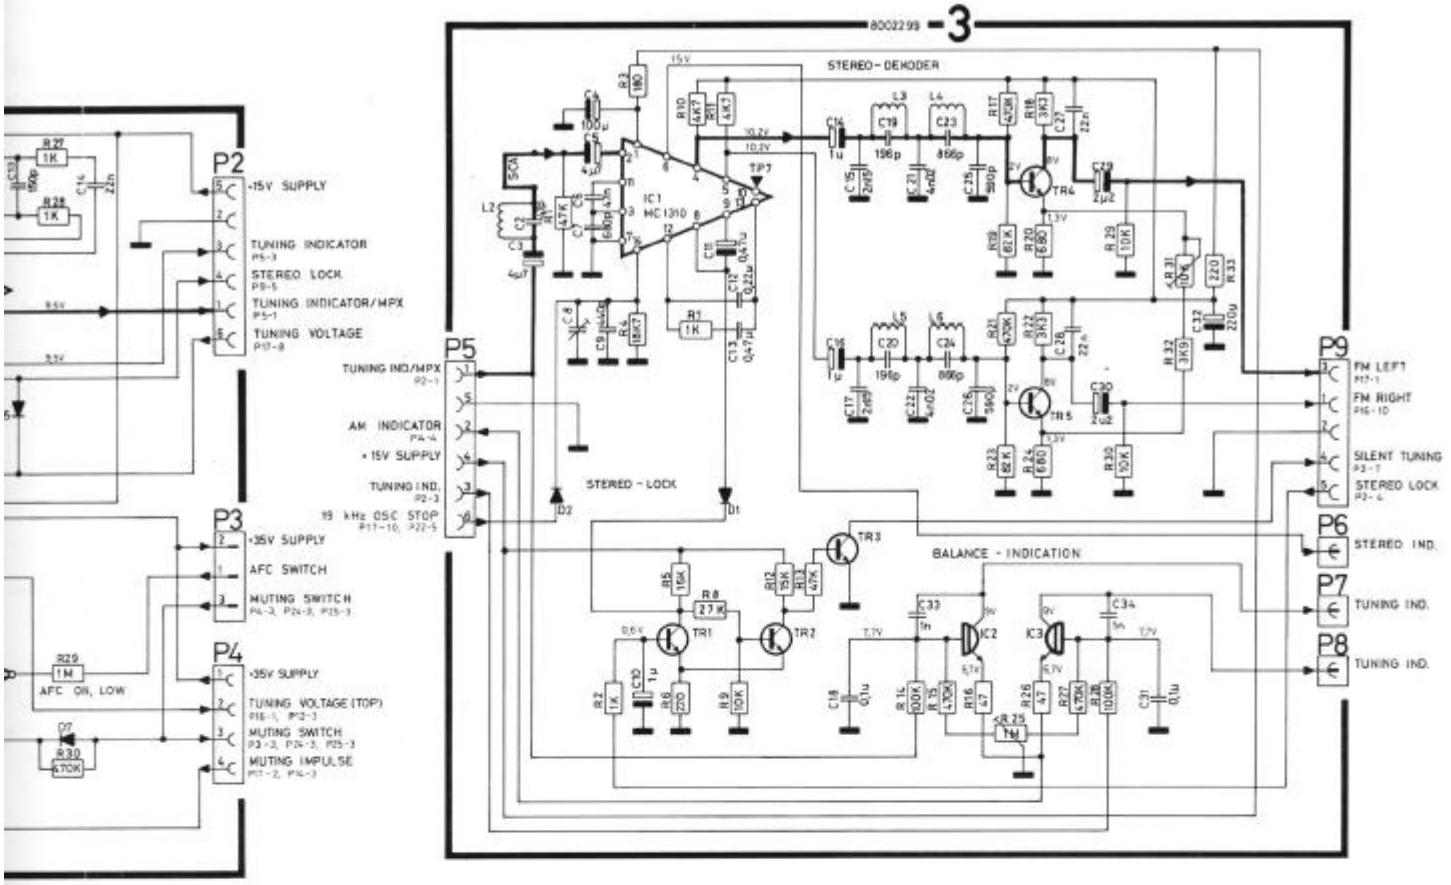
8002299 -3
STEREO - DEKODER
STEREO - LOCK
BALANCE - INDICATION
IC1 MC1310
P2
+15V SUPPLY
TUNING INDICATOR
STEREO LOCK
TUNING INDICATOR/MPX
TUNING VOLTAGE
P3
+35V SUPPLY
AFC SWITCH
MUTING SWITCH
P4
+35V SUPPLY
TUNING VOLTAGE (TOP)
MUTING SWITCH
MUTING IMPULSE
AFC OR, LOW
P5
TUNING IND./MPX
AM INDICATOR
+15V SUPPLY
TUNING IND.
19 kHz OSC STOP
P9
FM LEFT
FM RIGHT
SILENT TUNING
STEREO LOCK
P6
STEREO IND.
P7
TUNING IND.
P8
TUNING IND.

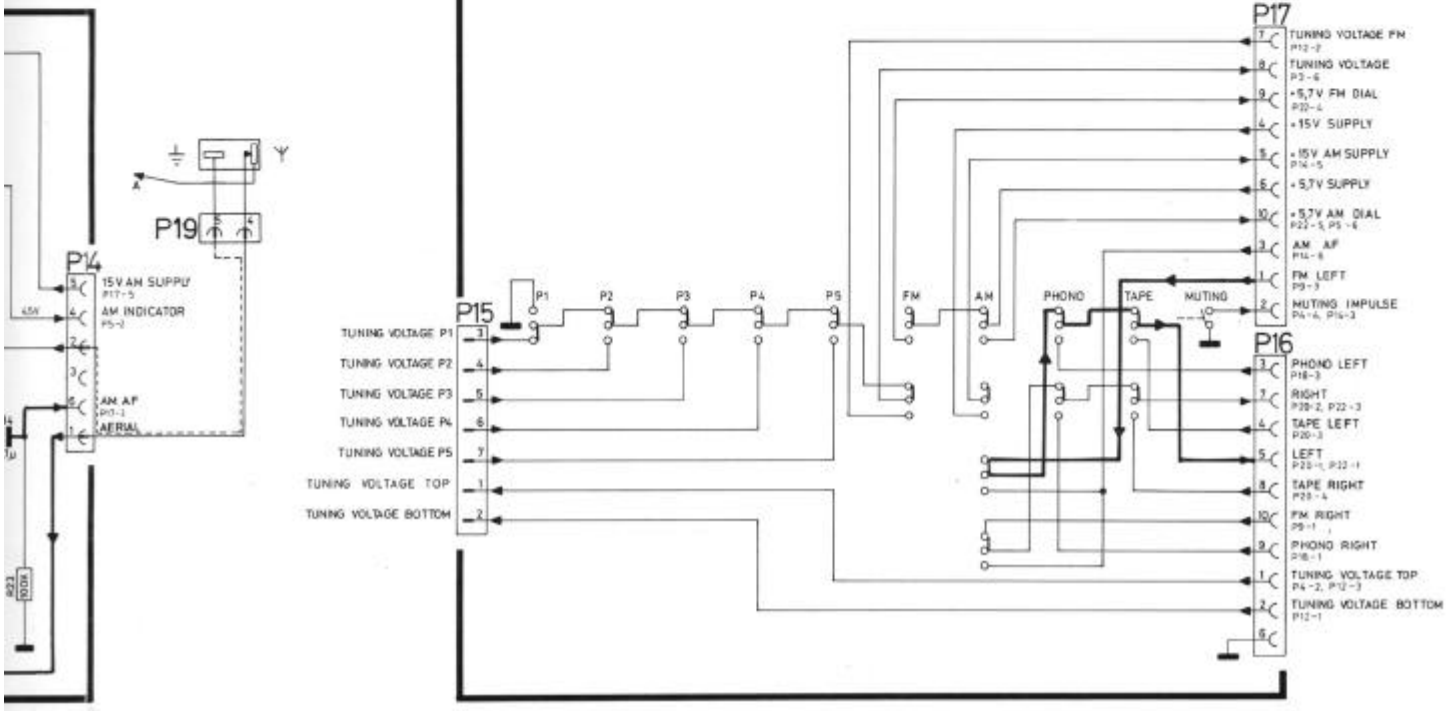
8002313 -9
P14
15V AM SUPPLY
AM INDICATOR
AM AF
AERIAL
P19
P15
TUNING VOLTAGE P1
TUNING VOLTAGE P2
TUNING VOLTAGE P3
TUNING VOLTAGE P4
TUNING VOLTAGE P5
TUNING VOLTAGE TOP
TUNING VOLTAGE BOTTOM
P1
P2
P3
P4
P5
FM
AM
PHONO
TAPE
MUTING
P17
TUNING VOLTAGE FM
TUNING VOLTAGE
+5,7V FM DIAL
+15V SUPPLY
+15V AM SUPPLY
+5,7V SUPPLY
+5,7V AM DIAL
AM AF
FM LEFT
MUTING IMPULSE
P16
PHONO LEFT
RIGHT
TAPE LEFT
LEFT
TAPE RIGHT
FM RIGHT
PHONO RIGHT
TUNING VOLTAGE TOP
TUNING VOLTAGE BOTTOM

Bang&Olufsen

Diagram 2

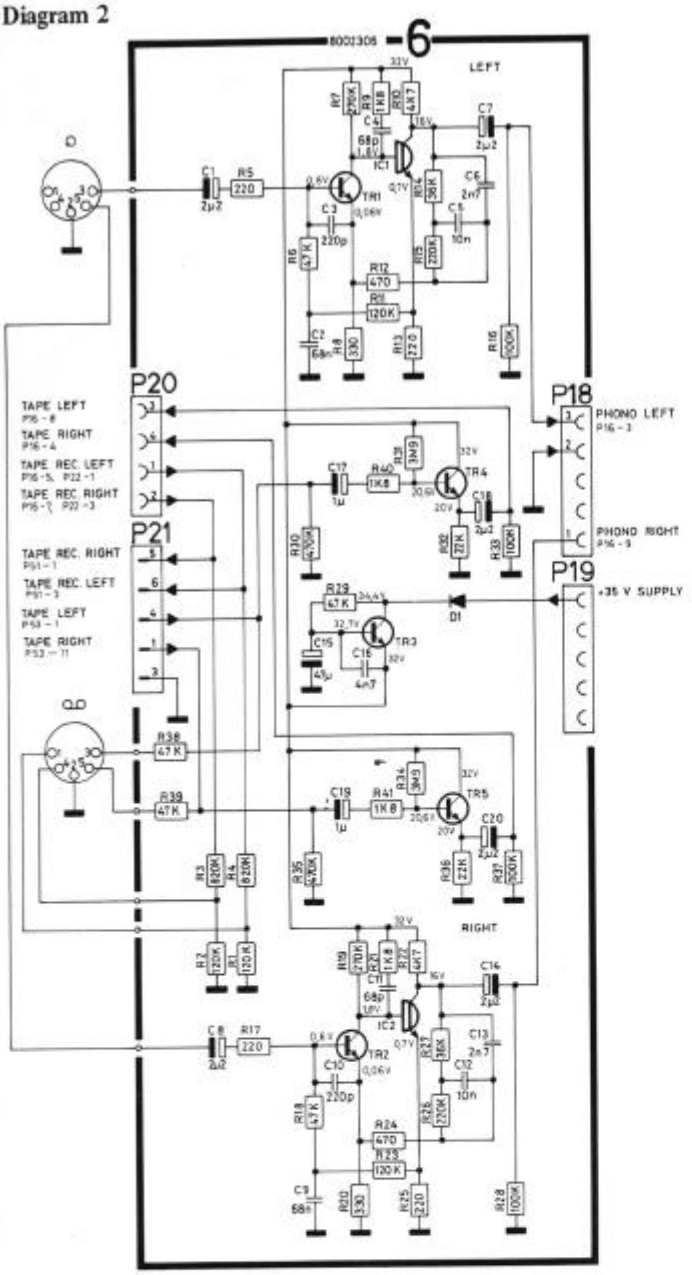

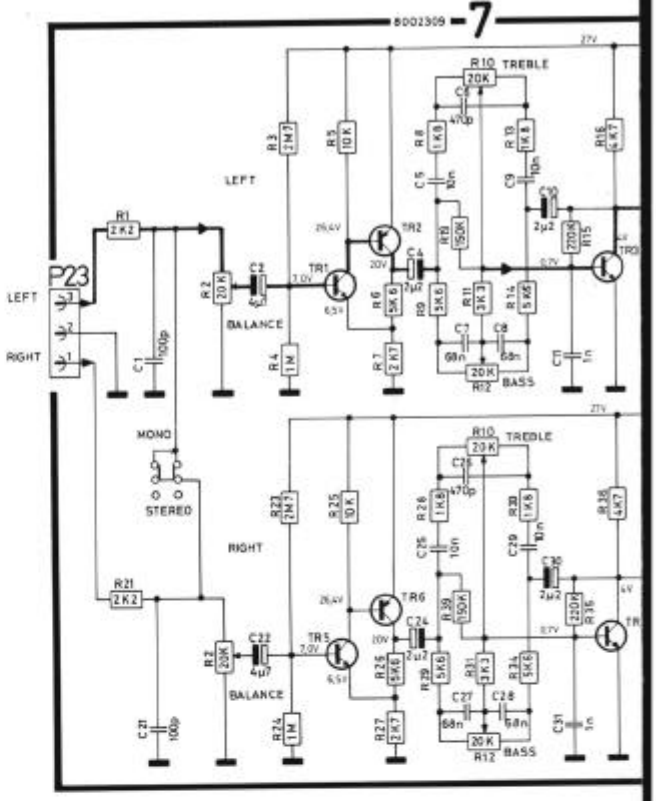

OVERSIGT OVER STIKPLACERING

Nedenstående oversigtstegning viser stikker
cering på diagramsiderne.

SURVEY OF PLACEMENT OF PLUGS/SOCKE

Below is shown the placement of plugs and
in the diagrammes.

ÜBERSICHT ÜBER ANBRINGUNG VON STEC

Untenstehende Übersichtszeichnung zeigt
bringung der Stecker auf den Schaltbildern

Diagram 1

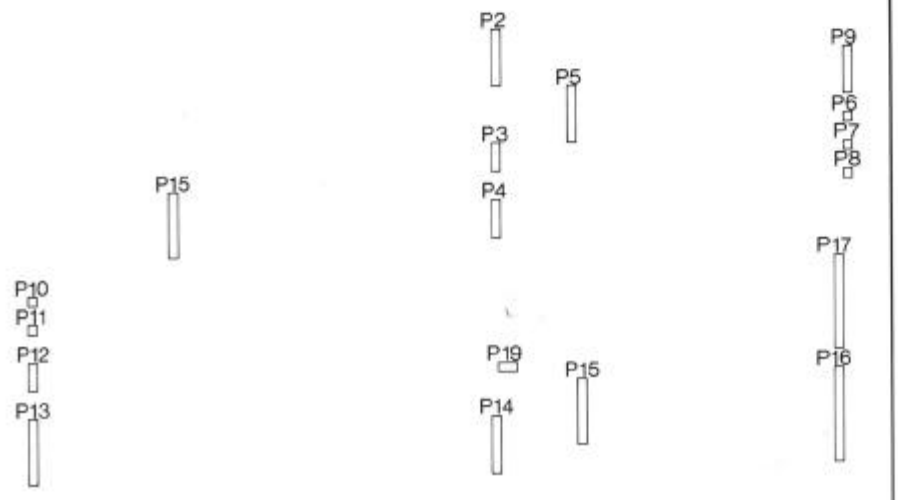

Diagram 2

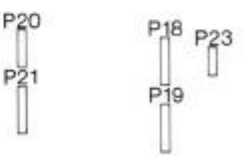

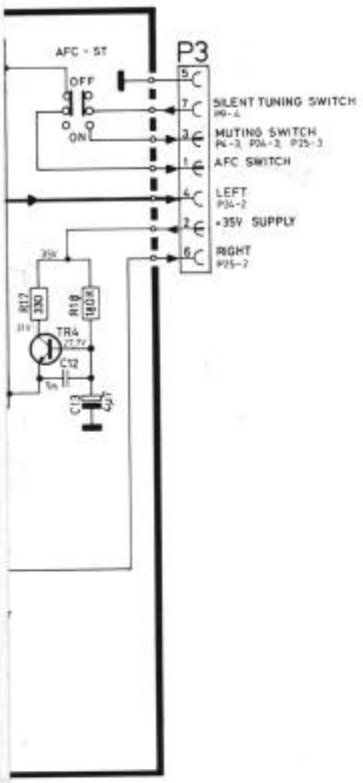

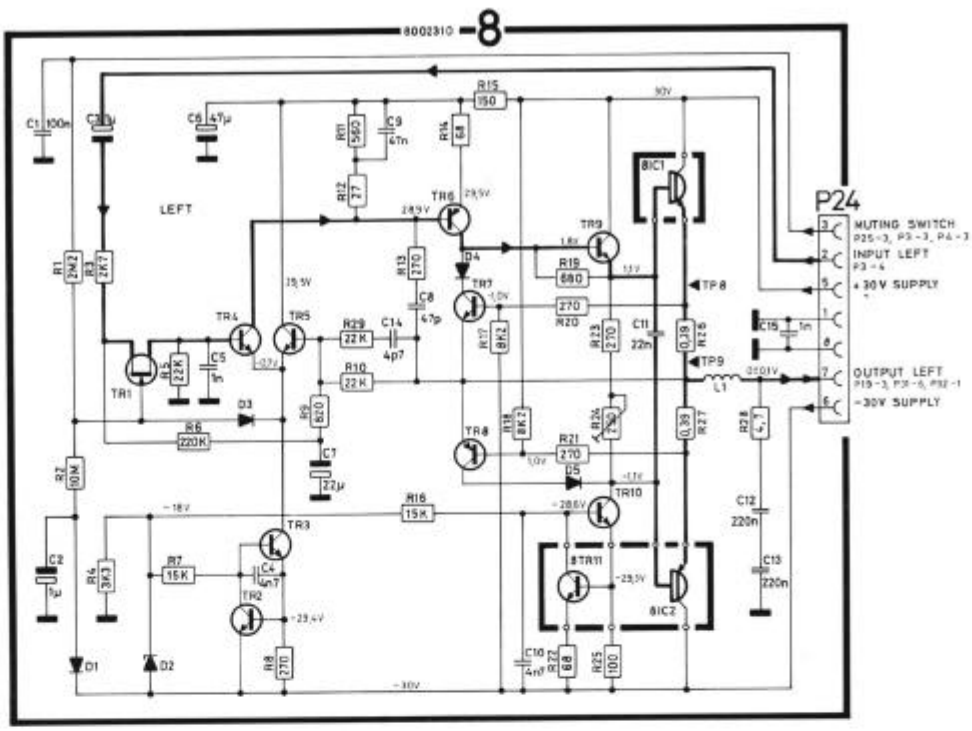

nes pla-

TS

sockets

KERN

lie An-

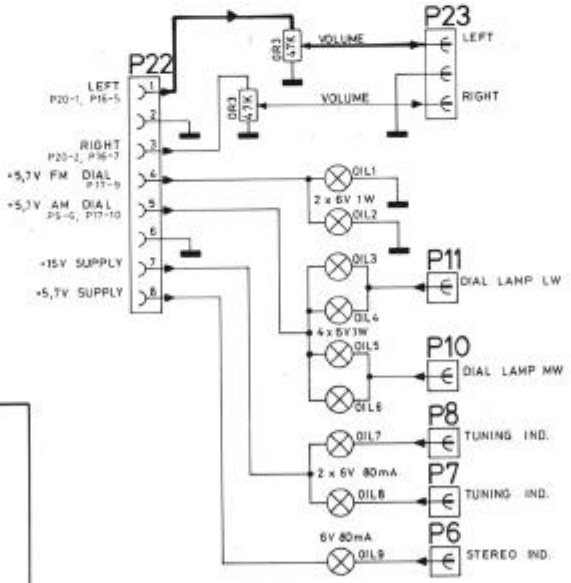

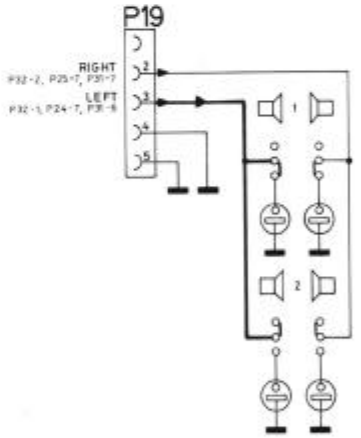

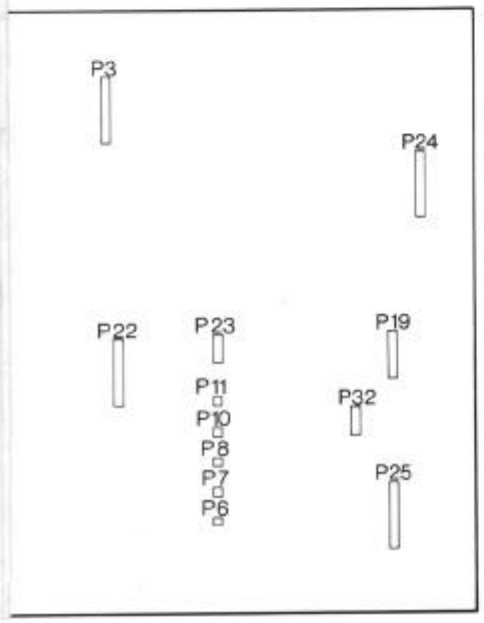

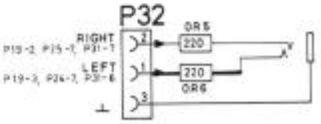

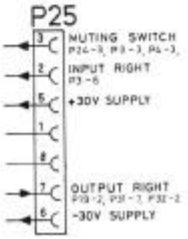

Bang&Olufsen

DIAGRAM 4

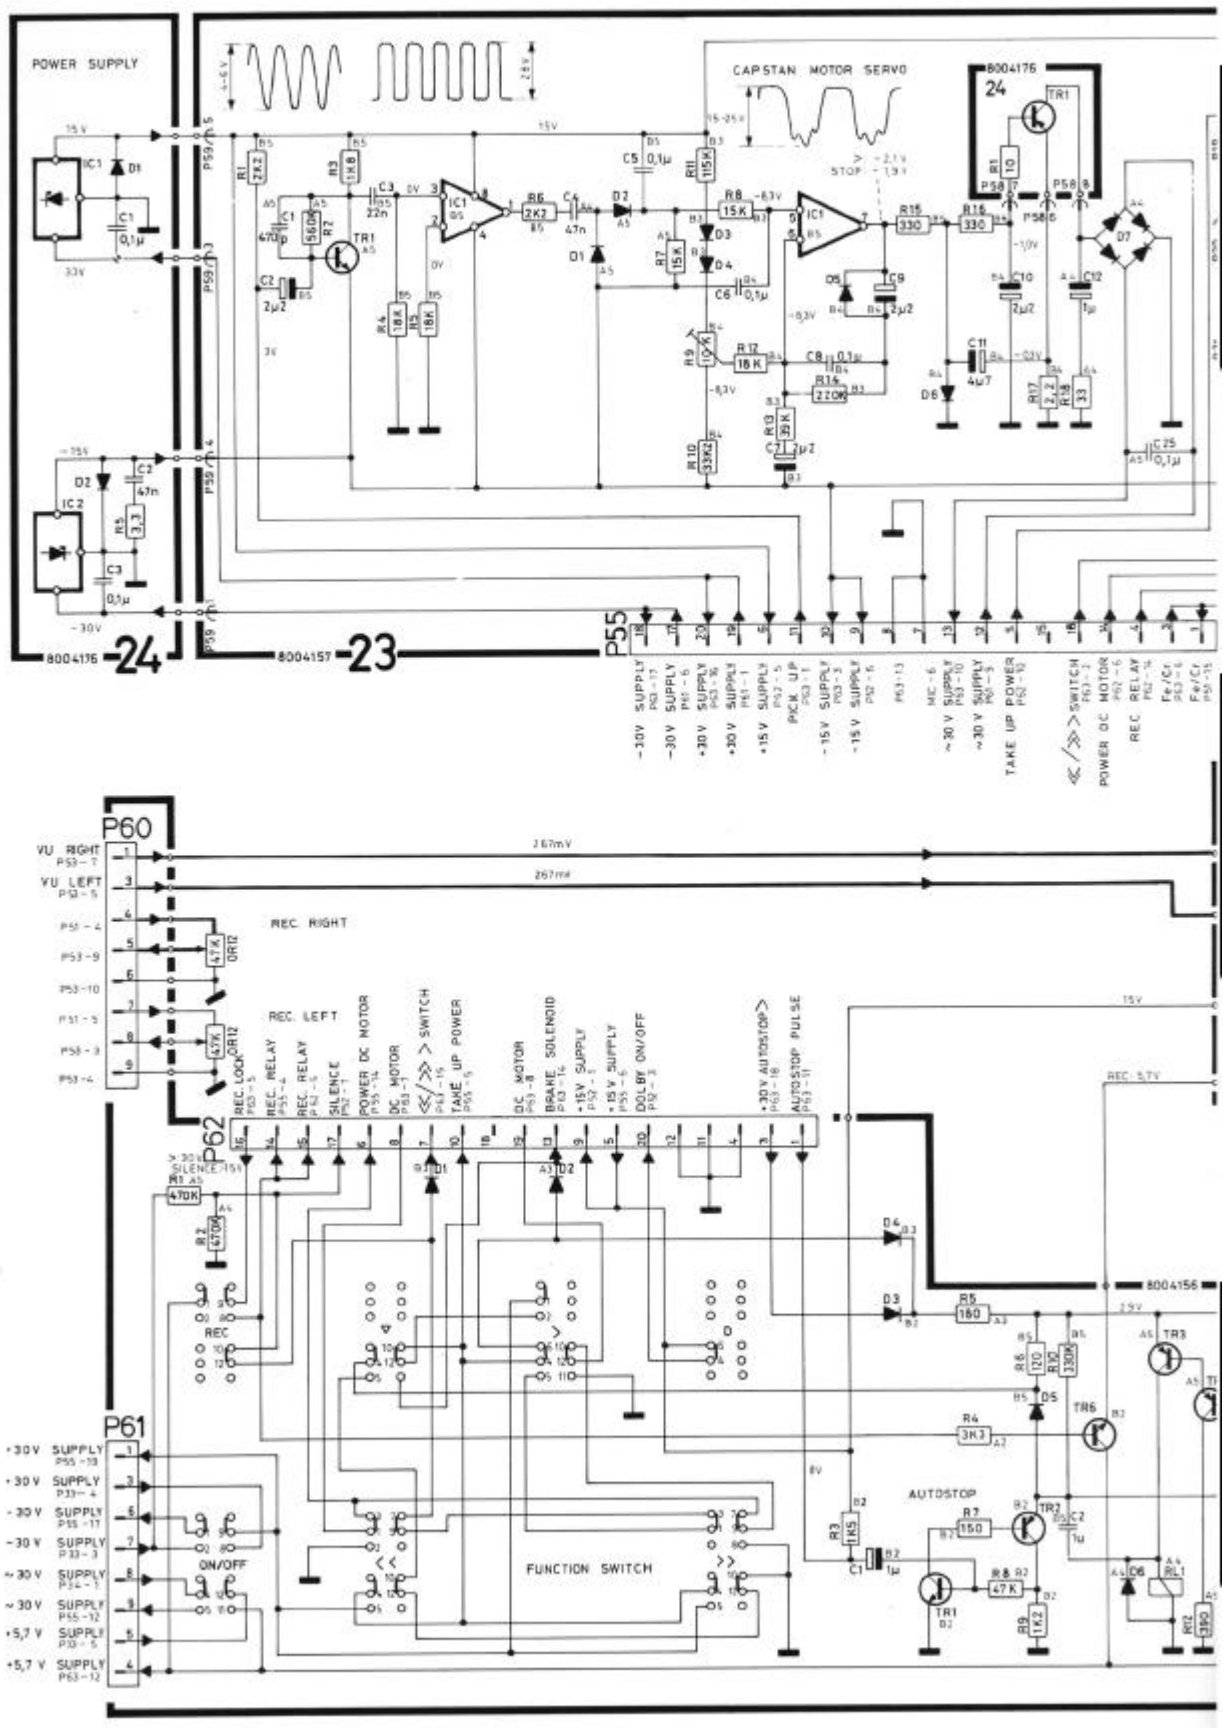

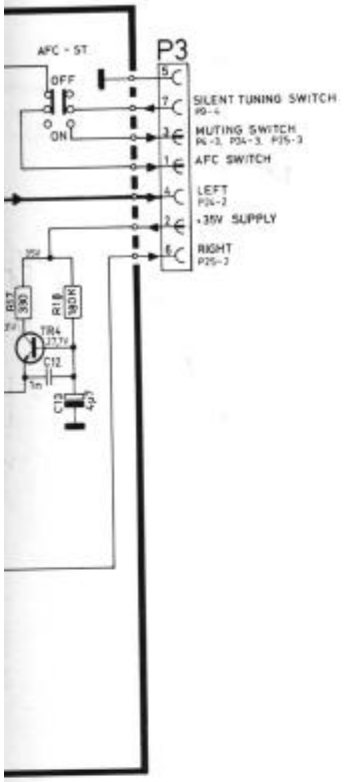

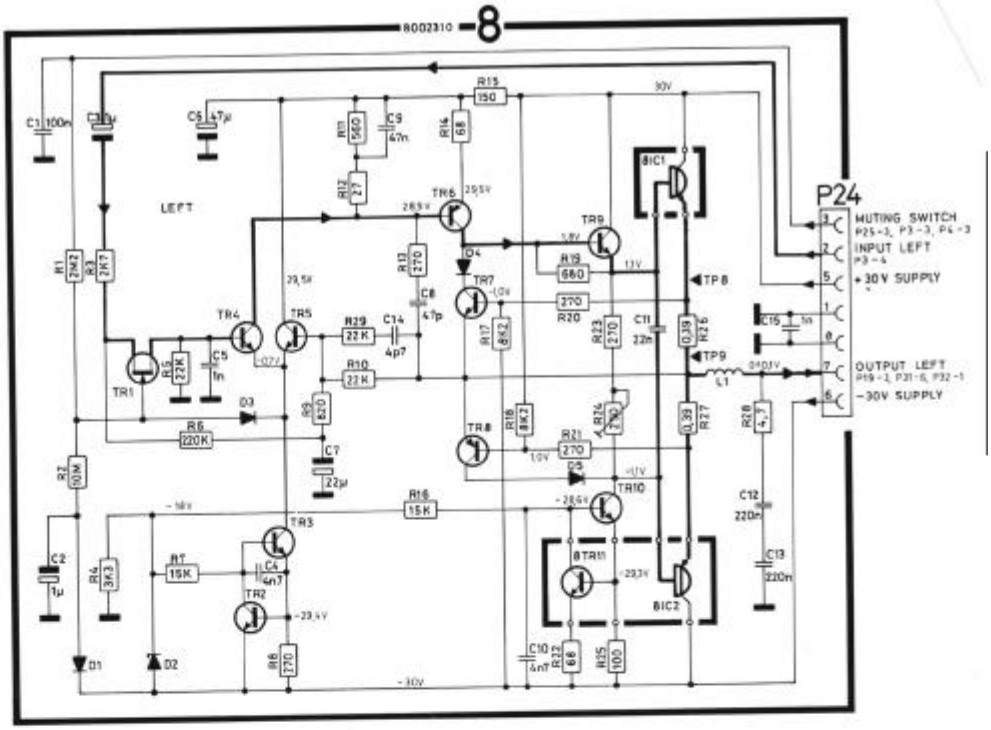

es pla-

TS

sockets

KERN

lie An-